

INSTALLATION INSTRUCTIONS

• Perfere you having road the installation


- Before you begin, read the installation instructions below. Observe all local building and safety codes.
- Unpack and inspect the product for any shipping damages. If you find damages, do not install. If you need assistance or have questions while installing your shower set, contact Customer Service.
- We recommend consulting a professional if you are unfamiliar with installing bathroom fixtures, and plumbing.TOOLS AND MATERIALS:Screwdriver
- ●Toflon Tan
- ●Teflon Tape

product.
1 Remove your existing shower head

These instructions are meant as a general guideline. Always check the package for instructions for your particular product.

2 Clean the shower arm supply pipe threads3 If a gasket is not included, wrap the shower arm supply pipe threads with Teflon Tape

4 Screw new shower head onto the shower arm supply pipe threads clockwise and hand tighten

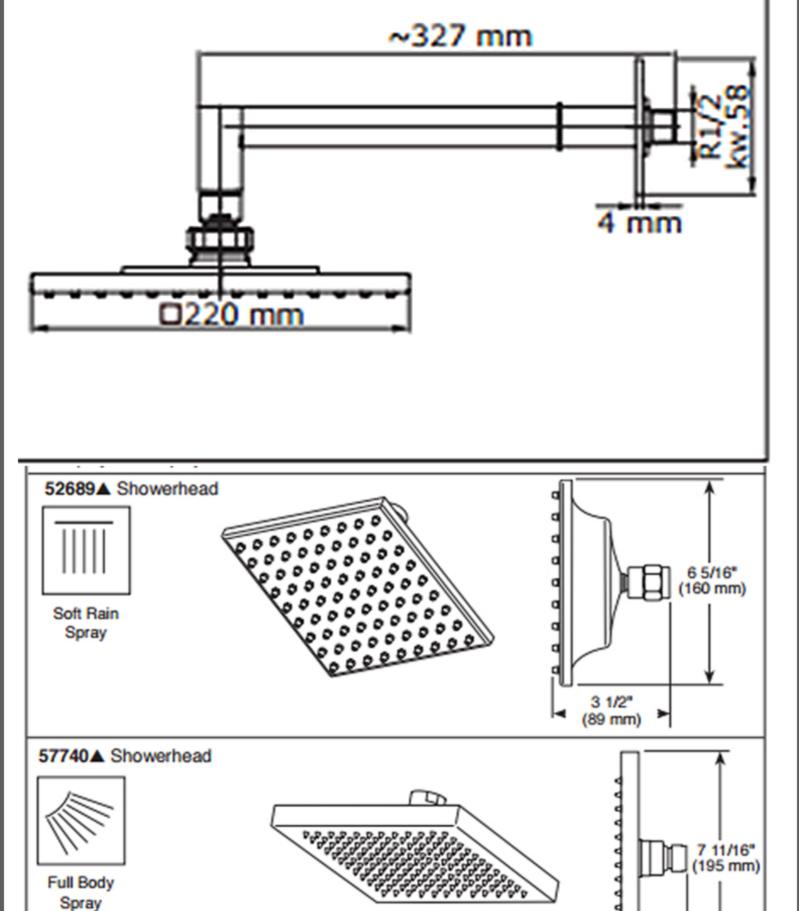











15

14

13