


24" Dark Oil Rubbed Bronze Solid Brass LED Rain Shower Head with Body Jets & Handheld Shower

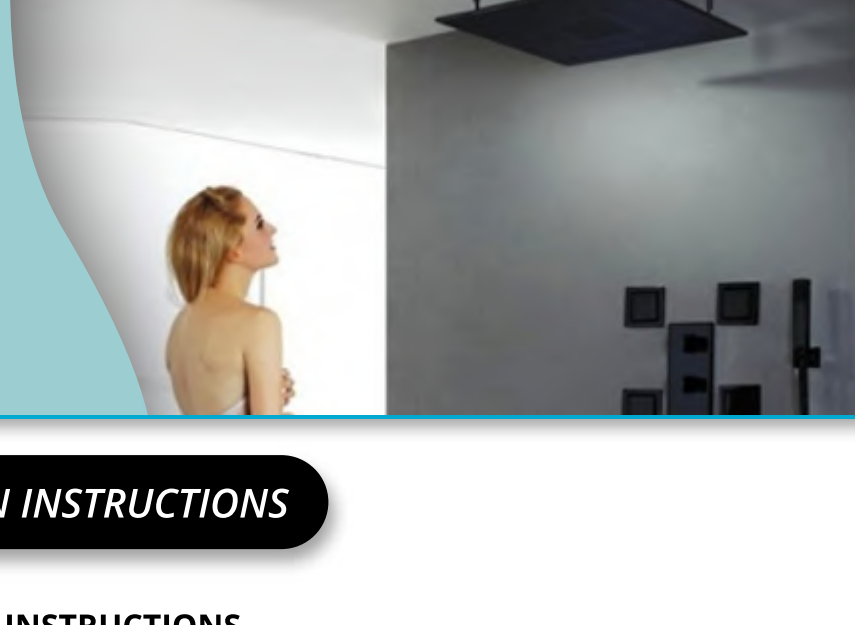

INSTALLATION INSTRUCTIONS

INSTALLATION INSTRUCTIONS

- Before you begin, read the installation instructions below. Observe all local plumbing and building codes.
- For the following installation instructions for your new shower head it is assumed that any old fixtures have been removed and all rough-in work has been completed.
- Unpack and inspect the shower head for any shipping damages. If you find any damages, do not install. Contact Customer Service at 800-297-0232. If you need assistance while installing your new shower head, call Customer Service.
- We recommend consulting a professional if you are unfamiliar with installing bathroom fixtures and plumbing. Shut off the water supply lines where the new shower head is being installed.


TOOLS AND MATERIALS:

- Groove Joint Pliers
- Adjustable Wrench
- Plumber's Tape
- Dry Cloth
- Phillips Screwdriver
- Silicone Sealant
- Damp Cloth
- Allen Wrench (provided)


Install Instruction

Remarks: ceiling mounted shower head come with fixing bar installation


1, draw size on ceiling

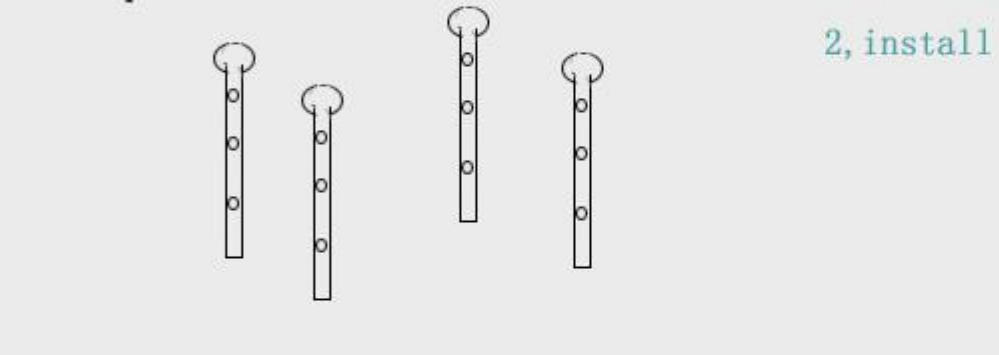

2, install fixing bar on ceiling




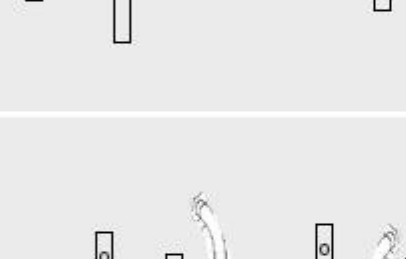


3, install fixing bar on shower head

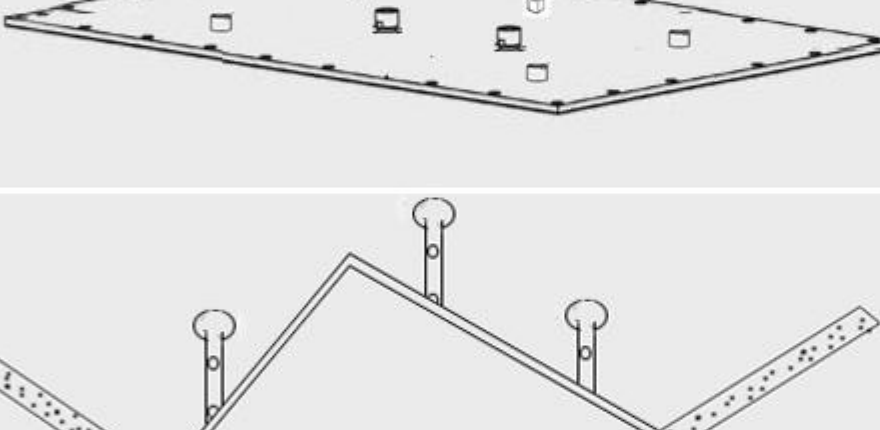

4, put shower head bar on ceiling fixing bar.


shower head install is ok now

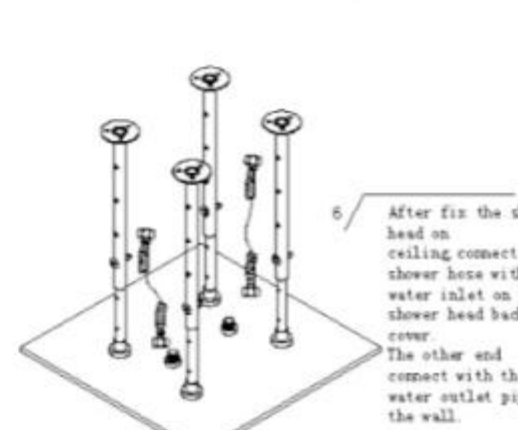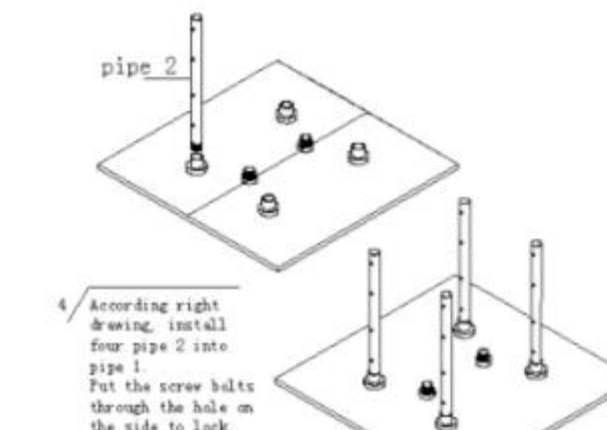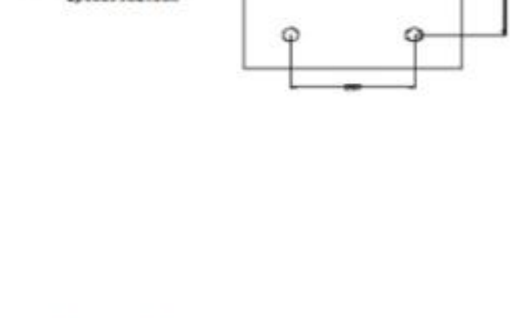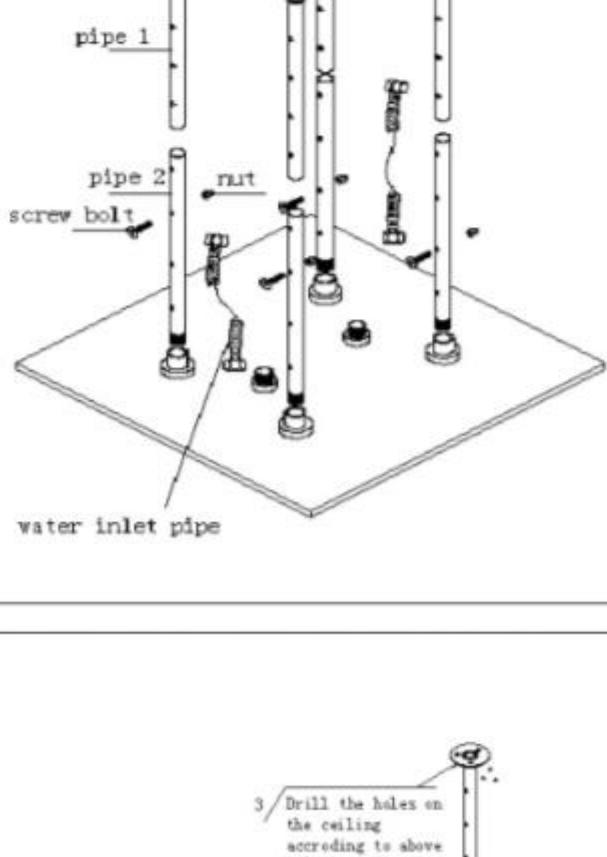

1. Install the Supply Piping

2. Install the Plaster Guard

Multiple Bodyspray Installation
Installations de jets corporels multiples
Instalación de múltiples rociadores corporales

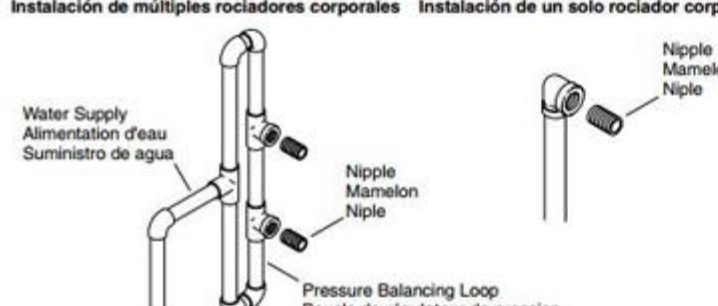

- Multiple Bodyspray Installations**
- Route the water supply lines.
 - If installing more than one bodyspray off the same supply line, construct a pressure balancing loop. Locate a tee along the loop at each bodyspray installation location.
 - Do not strap the pipes at this time.

Single Bodyspray Installations


- Route the water supply line.
- Install an elbow to the end of the supply pipe at the bodyspray installation location.

Install the Plaster Guard
Instalar el protector de yeso




- Install the plaster guard. Push until the plaster guard is snug against the face of the elbow (or tee).

Set Piping Depth
Establezca la profundidad de la tubería

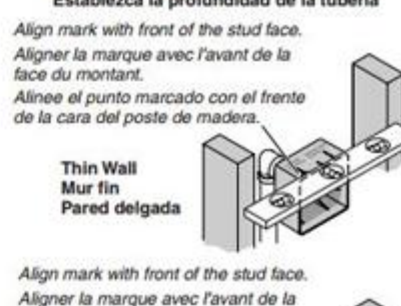


- Thin Wall**
Mur fin
Pared delgada
- Standard Wall**
Mur standard
Pared estándar

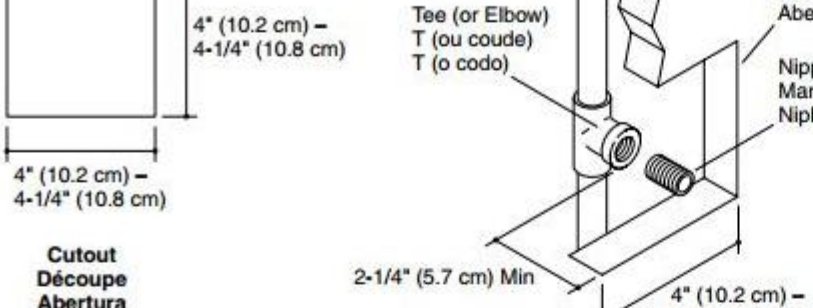

Cutout / Découpe / Abertura

- Install the water-resistant wall board.
- Cut out a 4" (10.2 cm) to 4-1/4" (10.8 cm) square at each tile installation location.
- Install the finished wall material.

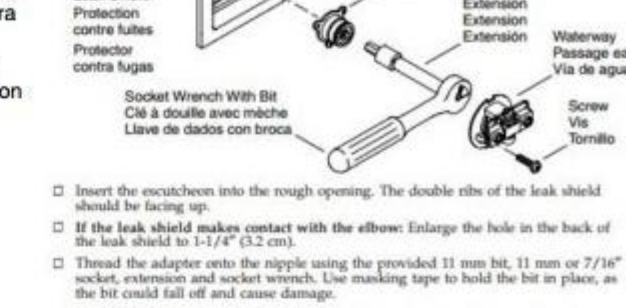


- Insert the escutcheon into the rough opening. The double ribs of the leak shield should be facing up.
- If the leak shield makes contact with the elbow: Enlarge the hole in the back of the leak shield to 1-1/4" (3.2 cm).
- Thread the adapter onto the nipple using the provided 11 mm bit, 11 mm or 7/16" socket, extension and socket wrench. Use marking tape to hold the bit in place, as the bit could fall off and cause damage.


IMPORTANT! The escutcheon should sit loosely at this point. If it is tight against the wall, use a larger pipe nipple.

- Align the groove in the waterway with the double ribs on the leak shield.
- Press the waterway into place over the adapter. Secure the waterway to the adapter with the screw provided.
- Verify that the escutcheon does not turn or shift.


Attach the Sprayhead
Attacher la tête du vaporisateur
Instalar la cabeza del rociador

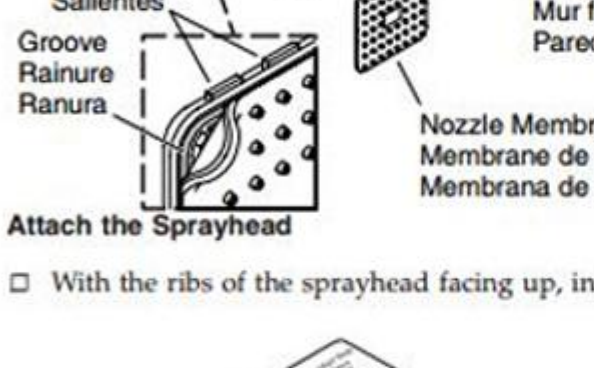

Attach the Sprayface
Attacher la face du vaporisateur
Instalar la placa exterior del rociador

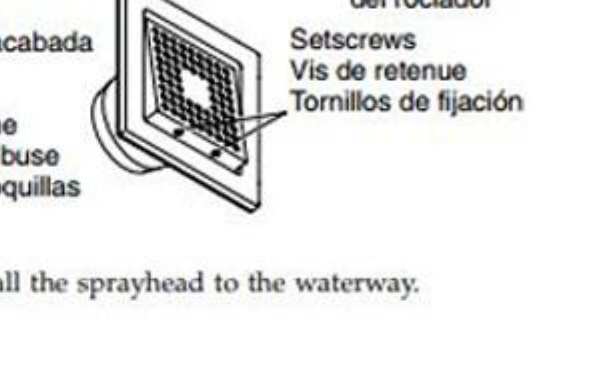


- With the ribs of the sprayhead facing up, install the sprayhead.

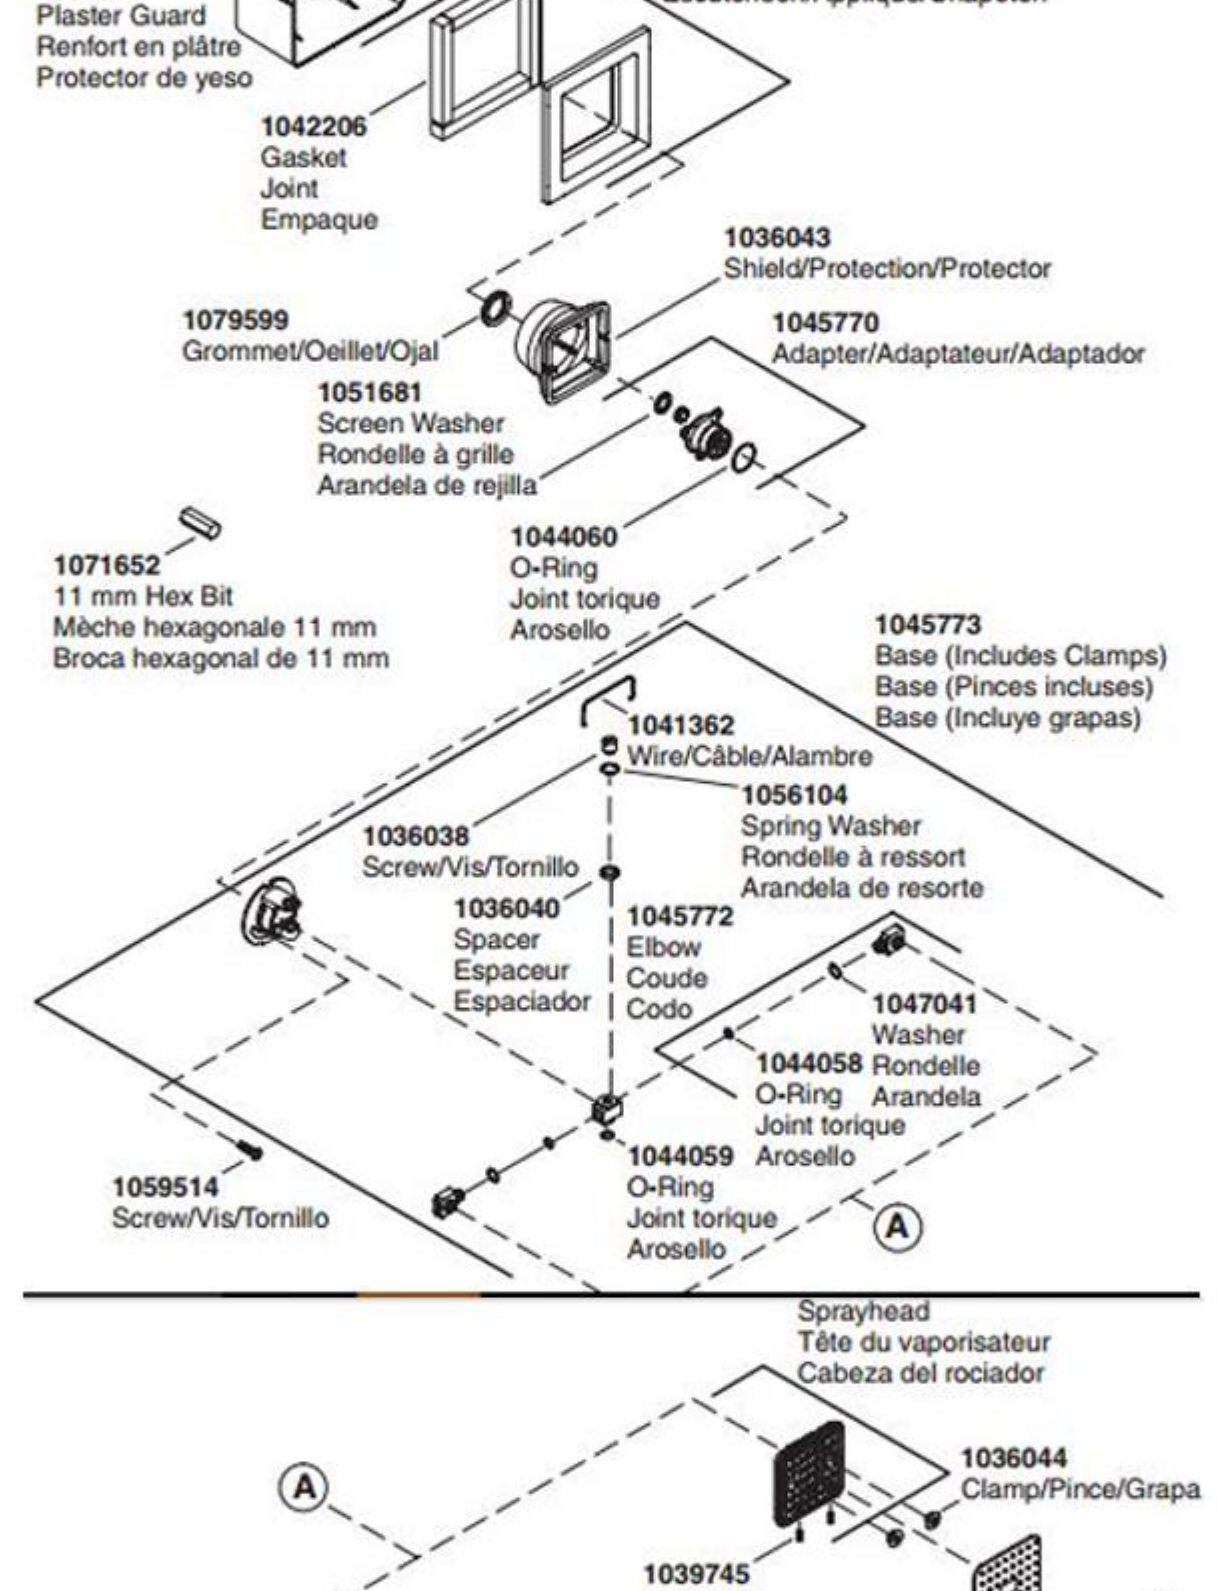

A: 0.91"

B: 8.66"

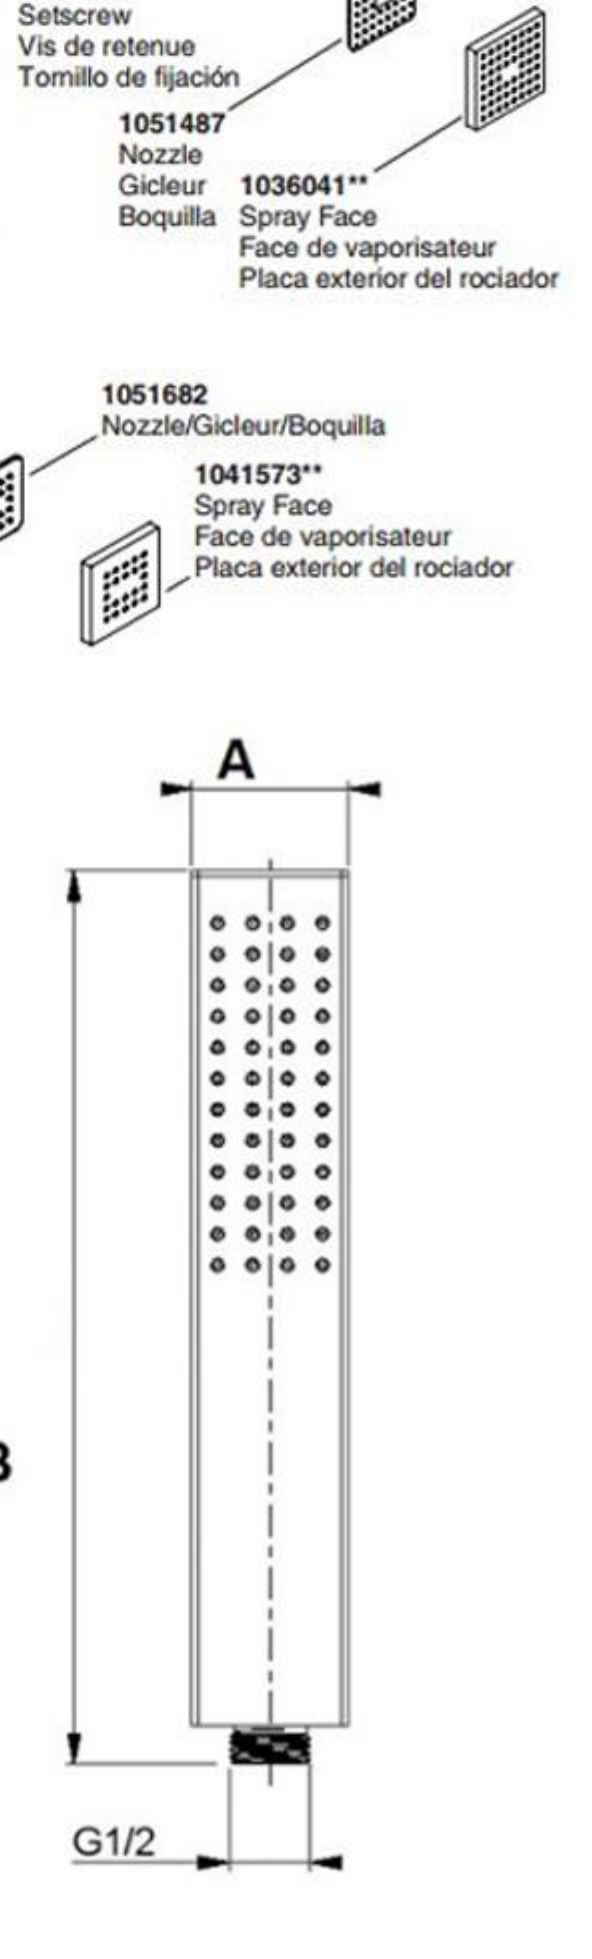

This General diagram and installation instructions are not intended for any specific model, but is presented as a general guideline for Installations!