
16" Oil Rubbed Bronze Square Color Changing LED Rain Shower Head

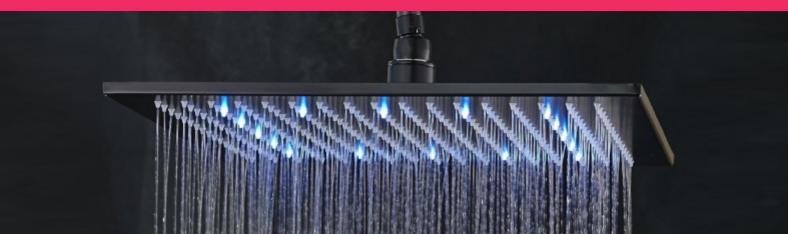

INSTALLATION INSTRUCTIONS

• Unpack and inspect the product for any shipping damages. If you find damages, do not install. If you need assistance as the contract of the

• Before you begin, read the installation instructions below. Observe all local building and safety codes.


- tance or have questions while installing your shower set, contact Customer Service.
 We recommend consulting a professional if you are unfamiliar with installing bathroom fixtures, and plumbing.
- TOOLS AND MATERIALS:


Screwdriver


- Teflon Tape
- These instructions are meant as a general guideline. Always check the package for instructions for your particu-

lar product.1 Remove your existing shower head2 Clean the shower arm supply pipe threads

- 3 If a gasket is not included, wrap the shower arm supply pipe threads with Teflon Tape
- 4 Screw new shower head onto the shower arm supply pipe threads clockwise and hand tighten
- 200

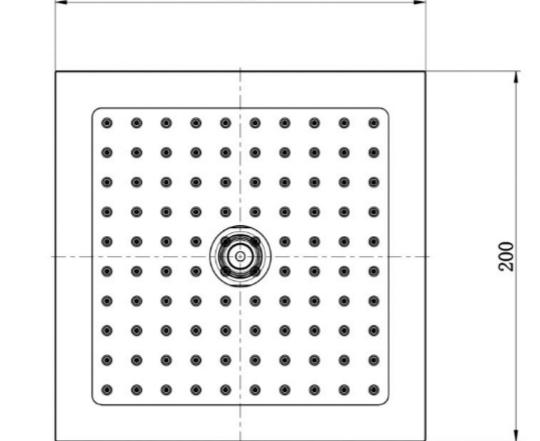

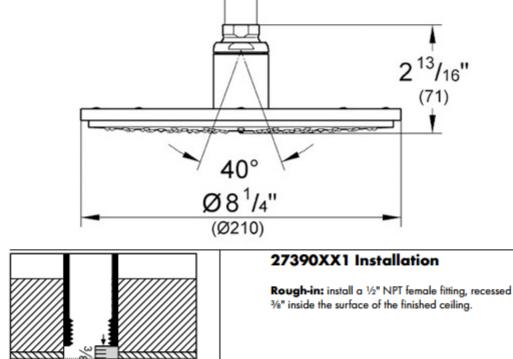

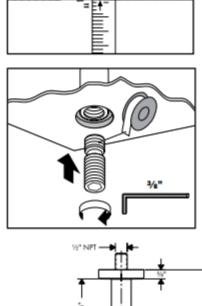


Teflon tape.


Install the mounting nipple using a ¾" Allen wrench (not included).

Wrap the threads on 1/2" NPT part of the nipple with

Mar. area and

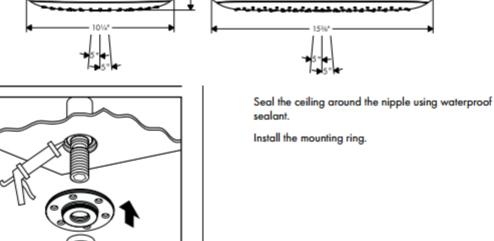

Mark the positions of four screw holes.

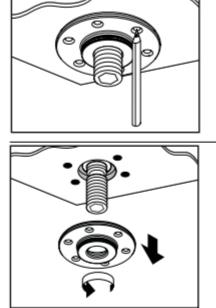


Drill the screw holes using a 6 mm bit (1).

Install the anchors (2).

Install the mounting ring.

sealant (3).

Remove the mounting ring.

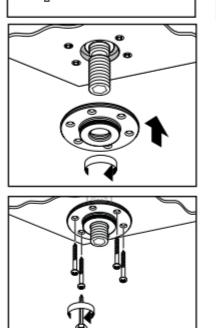


Seal the ceiling around the anchors using waterproof

Install the escutcheon.

Install the extension pipe.

Install the screws.

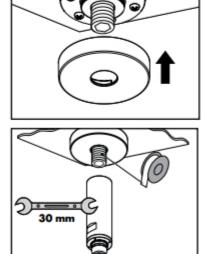

Make sure that the filter is installed in the showerhead.

Push the showerhead against the extension pipe until

may result in injury or product

damage.

Wrap the threads on the nipple using Teflon tape.

